

MKE

Universal Midi Keyboard Electronics

User's Guide

© 2006 by
Doepfer Musikelektronik GmbH
Geigerstr. 13
82166 Graefelfing
Germany
Phone: #49 89 89809510
Fax: #49 89 89809511
Web Site: www.doepfer.de
Email: sales@doepfer.de

Electrical safety / EMC compatibility

MKE is a so-called **OEM product** (OEM original equipment manufacturer) that cannot be used independently but has to be combined with additional electrical or electronic equipment to become a working device (suitable keyboard, pitch bend and modulation wheel, rotary or fader potentiometer, power supply, case/housing). The manufacturer of MKE does not know the final assembly of the complete device in which the MKE is used as a part of the complete device. The final responsibility with regard to **electrical safety** and **electromagnetic compatibility** is up to the user who is assembling the complete device.

Please pay attention to the following items:

The **power supply** used in combination with the MKE has to be a closed type (in Germany a power supply with VDE approval is required). Normally an AC adapter with plastic case is used. It is not allowed to use **open power supplies** with open **mains voltage** access (e.g. via mains lead, pcb tracks, electronic parts).

On the MKE electronics **preventing measures** against **electromagnetic radiation** are met (e.g. RF filters at the power supply input and the MIDI lines). But it is impossible to estimate to what extent the **components added by the user** affect the **EMC properties** of the complete assembly. Therefore the **complete device** has to be **shielded** against **electromagnetic radiation** (incoming and outgoing). These demands are normally met by a closed metal case that covers the complete assembly. The metal case should be connected to GND of the MKE.

Warranty

- All connections have to be carried out in the off-state of the MKE (i.e. without power supply)
- The MKE is an electrostatic sensitive device. Avoid any electrostatic charges !
- Do not solder directly to any of the pin headers but use female connectors to make the connections between the MKE and your application. We offer suitable cables.
- If external momentary switches or LEDs are connected to the MKE they have to be soldered in the off state of the MKE (i.e. without power supply)
- Applying a negative voltage or a positive voltage beyond +5V at the ADC inputs (ST3, ST4, ST5, ST6) will destroy the circuit.
- Avoid short cuts while MKE is powered !
- Ignoring any of these items will cause warranty loss !
- Return of the MKE within the 2 weeks return time limit (valid only in Germany) is only possible if all these items have been met. MKE that have been soldered by the customer cannot be taken back (e.g. if external momentary switches or LEDs have been soldered to the MKE by the user).

Contents

Electrical safety / EMC compatibility	2
Warranty.....	2
Contents.....	3
Introduction.....	4
Connections (pcb bottom side).....	6
(1) Power Supply	6
(2) Midi-Out.....	6
(3) Midi-In.....	6
(4) Keyboard connectors	9
(5, 6, 7, 8) Connectors for pitch bend, modulation, volumen and sustain / after touch.....	9
(9) Jumper for pull up/down resistor ST8.....	11
(10) sound card connector.....	11
Controls (pcb top side)	12
Display (9).....	12
LEDs (10).....	12
Buttons (11).....	12
1. Midi channel.....	13
2. Transpose	13
3. Program Change.....	13
4. Function of ST6.....	13
5. Up / 6. Down	13
Parameter Storage	14
Non-dynamic Operation	14
Check list.....	15

Introduction

- MKE is an **universal Midi keyboard electronics**, that can be used in combination with these devices:
 - standard keyboard (manufacturer: Fatar/Italy) with 2, 3, 4 or 5 octaves (connected to the female headers ST1 and/or ST2)
 - pitch bend wheel (special spring-loaded rotary potentiometer), connected to the pin header ST3
 - modulation wheel (special rotary potentiometer), connected to the pin header ST4
 - rotary or fader potentiometer for volume (Midi controller #7), connected to the pin header ST4
 - after touch sensor or sustain, foot switch (factory setting: sustain = Midi controller #64), connected to the pin header ST6
 - with a small circuit modification even a second rotary or fader potentiometer can be connected to ST6 to generate any Midi controller (free adjustable Midi control change number)
- The MKE has this controls available
 - 6 buttons for the functions
 - Midi channel
 - transpose
 - program change
 - function of ST6 (assignment of any Midi control change number or after touch)
 - up
 - down
 - 6 light emitting diodes (LEDs), assigned to the buttons
 - 3 digit LED display

MKE is equipped with **Midi In** and **Midi Out**. The incoming Midi messages are **merged** to the data generated by the MKE. In this way **several MKE can be linked** together or combined with other OEM products (e.g. Pocket Electronics, Dial Electronics, CTM64, MTC64) to built a user specific Midi controller. E.g. two MKE and one CTM64 can be used to built an organ keyboard with 2 velocity sensitive manuals (2 x MKE) and a non-dynamic bass pedal (CTM64).

MKE is available only as an **assembled and tested pc board**. The pc board measures are about 68 x 85 x 45 mm. Four mounting holes with 3 mm diameter are available for mounting the pc board to a suitable base e.g. with distance sleeves or spacers and screws.

If you order MKE in combination with one of the keyboards we have available (Fatar TP7/2 octaves or TP/9 with 3, 4 or 5 octaves or organ keyboard TP/8O with 5 octaves) please do not forget to order the cable sets that are required to connect MKE to the keyboard.

If MKE is ordered without keyboard please specify the **length of the keyboard** as the connectors are different for 2, 3, 4 and 5 octaves.

We have suitable keyboards (2, 3, 4 or 5 octaves), keyboard connection cable sets, pitch bend or modulation wheel kits, cable sets for ST3...6, sustain pedals and so on available. Please look at our web price list (section spare parts resp. accessories) for details and prices. These parts are not included with the MKE and have to be ordered separately.

We do not offer a suitable housing as the MKE can be combined with different types of keyboards and other OEM products (e.g. Pocket Electronics, Dial Electronics, CTM64, MTC64) to obtain a user-specific Midi controller.

An **external power supply** (7-12VDC@min. 250mA) is required. It is included with the MKE only within Germany. In other countries the external power supply has to be ordered additionally by the local dealer if necessary.

Installation of the MKE requires some electrical knowledge (especially if wheels, potentiometers, the after touch sensor or a sustain foot switch have to be connected to the MKE). Please leave the installation of MKE to an expert if you are not familiar with electronics. We take back only MKE modules in the original state, i.e. without solder residues, without scratches and so on.

Please pay attention to the following remarks and to the warranty notes on page 2. Ignoring these notes causes warranty loss and the right to return the goods.

Connections (pcb bottom side)

Please refer to the picture on the next page.

(1) Power Supply

The MKE does not have a built-in power supply. Instead it uses a plug-in type external power supply (AC adapter). One reason for this feature is electrical safety. Keeping danger voltages (main) out of the MKE increases the electrical safety. Therefore an external power supply of high quality and safety should be used. If the keyboard is used in Germany the external power supply has to be VDE approved. Another reason for the external power supply is the fact that line voltages and plug types vary considerably from country to country. Using a plug-in external supply the MKE can be used anywhere with a locally purchased power supply, thus keeping the retail price down.

The power supply must be able to deliver 7-12 VDC unstabilized voltage, as well as a minimum current of 250mA. The MKE is switched ON by plugging the AC adapter into a wall outlet and connecting it to the appropriate jack on the MKE board. There is no separate ON/OFF switch. If the polarity of the power supply is incorrect, the MKE will not function. However, there is no danger of damage to the circuitry since it is protected by a diode. The correct polarity is: outside ring = GND, inside lead = +7...12V. The power supply not included with the MKE and has to be purchased separately.

After power on the six LEDs light up for a short moment and the software version (e.g. 1.0) is displayed.

(2) Midi-Out

Connect the Midi Out jack with Midi In of the device to be controlled by the MKE (e.g. sound expander, computer, sequencer, synthesizer, or a second MKE or another OEM product like Pocket Electronics, Dial Electronics, CTM64) via a suitable Midi cable.


(3) Midi-In

The MKE features a Midi input. This input may be connected to another Midi device. The incoming Midi data are merged to the data generated by the MKE. At the first place the Midi input is used for daisy-chaining several MKE or other OEM products like Pocket Electronics, Dial Electronics or CTM64. The Midi input of MKE is not suitable for large amounts of Midi (e.g. SysEx strings or Midi messages coming from an computer sequencer). In case of large amounts of incoming Midi messages data loss or delay may occur. If the merge feature of the MKE is not required the Midi input is left open.

(1)
power supply
7-12V/100mA
DC (BU3)

(2)
Midi Out
(BU2)

(3)
Midi In
(BU1)

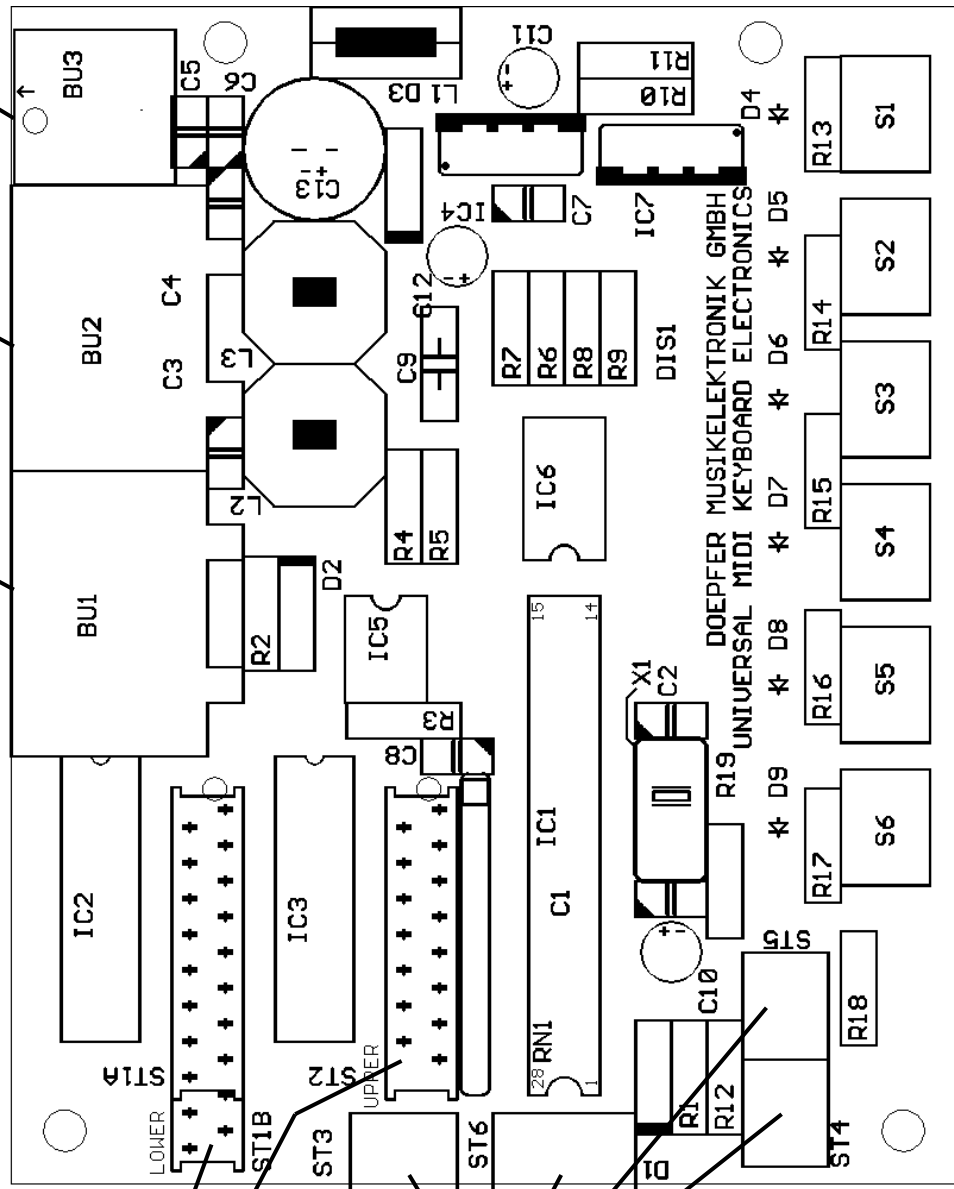


(4)
keyboard connectors
ST1A/ST1B and ST2

(5,6,7,8)
connectors for

- pitch bend (ST3)
- modulation (ST4)
- volumen (ST5)
- sustain / after touch (ST6)

MKE Version 1

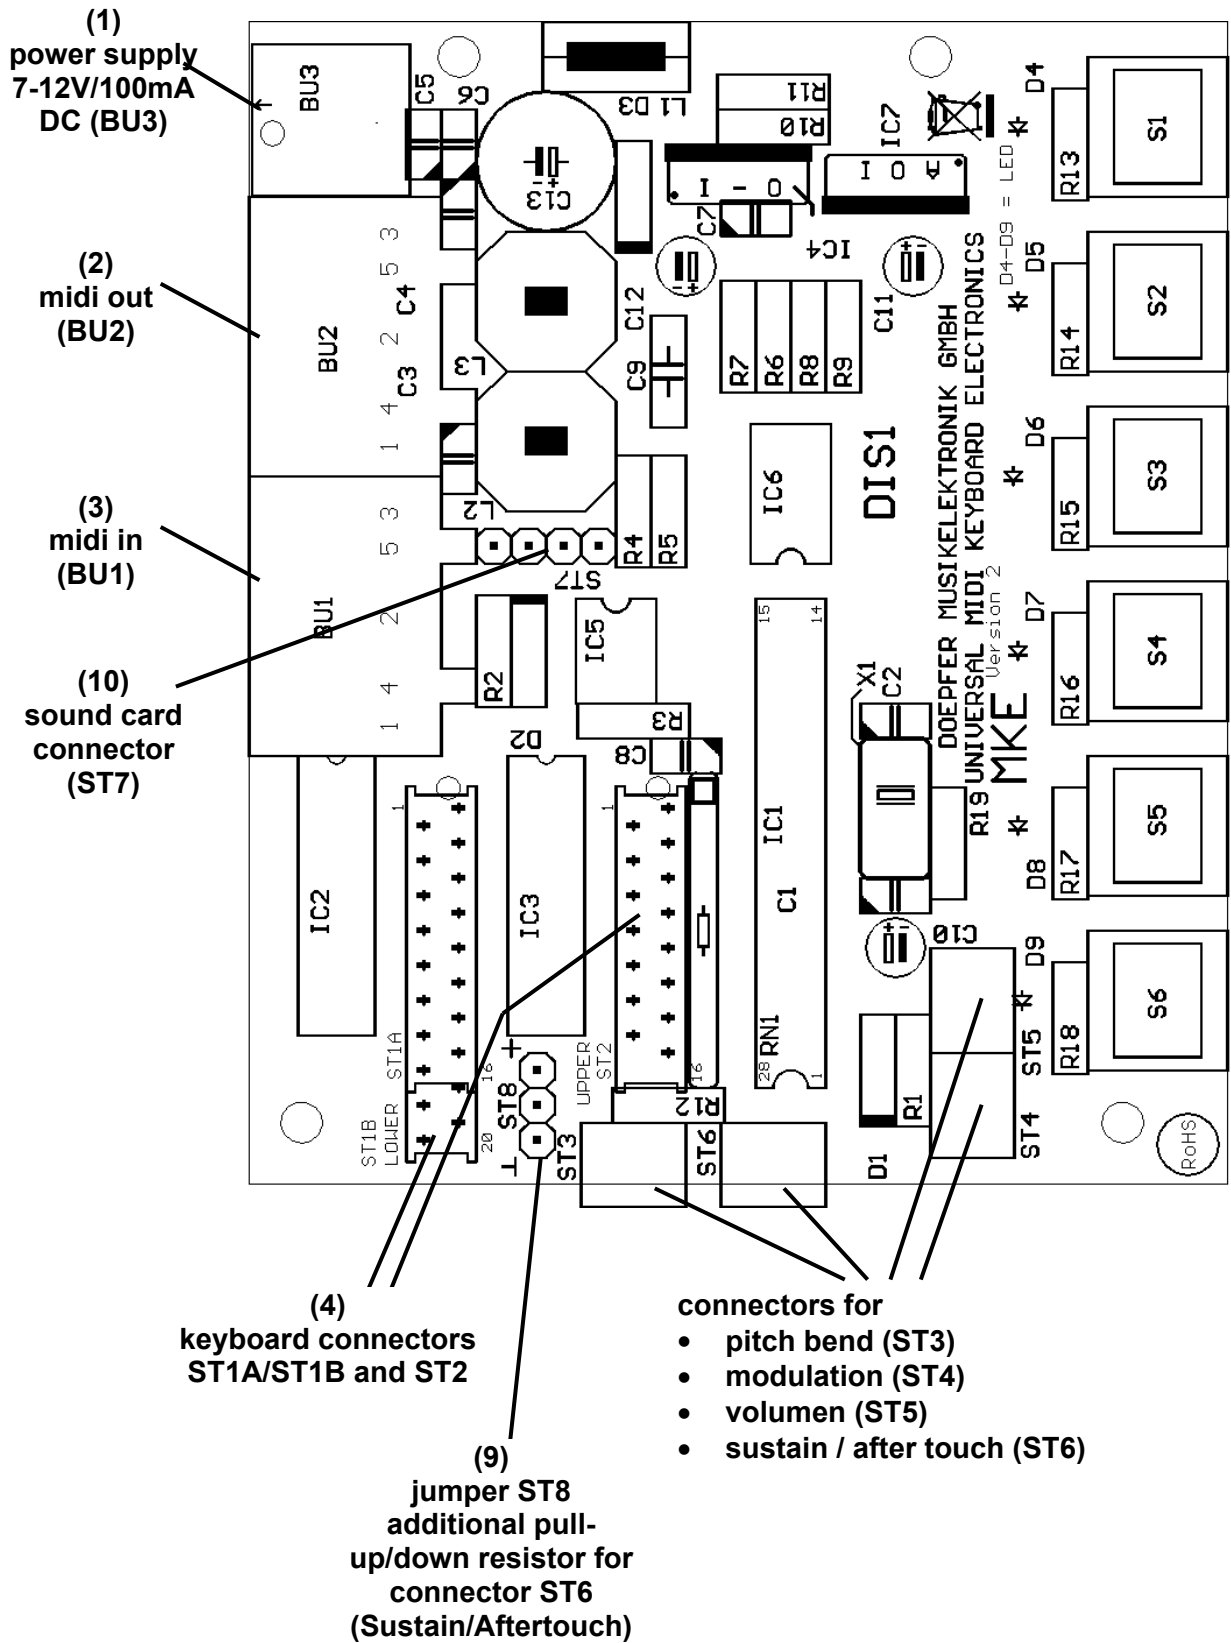

MKE Version 2

(4) Keyboard connectors

These two female connectors (AMP Micromatch, 16 resp. 20 pin) are used to connect the keyboard. They are compatible to the connectors used by the keyboard manufacturer Fatar/Italy in their 2, 3, 4 and 5 octave keyboards. To connect MKE and the keyboard ribbon cables with 16 or 20 pins and a suitable male connector on each end are used. The male connectors are equipped with code pins that have to fit into the corresponding holes in the pc boards of MKE and the keyboards. If the connectors are put on in the wrong way the MKE/keyboard combination will not work but it is not possible to damage the electronics or the keyboard.

For the different types of keyboards these connectors are used:

keyboard type	connectors used	Offset
2 octaves (25 keys)	ST1B (one 20 pin connector)	12
3 octaves (37 keys)	ST1B (one 20 pin connector)	0
4 octaves (49 keys)	ST1A und ST2 (two 16 pin connectors)	12
5 octaves (61 keys)	ST1A und ST2 (two 16 pin connectors)	0

The offset value indicates if the contact matrix of the manufacturer (Fatar) starts with contact number zero or if the first 12 contactes (i.e. the lowest octave) are skipped in the contact matrix. The table shows that for the 2 and 4 octave keyboards the lowest octave of the contact matrix is not used. This has effect only on the transposition of the keyboard in question and causes no problems as any desired transposition can be chosen (0, 12, 24, 36, 48 ..., see below) for the MKE. One simply selects the desired transposition to have the keyboard in the desired Midi note range.

If a keyboard with 2 or 3 octaves is used ST2 remains unconnected. If a keyboard with 4 or 5 octaves is used ST1A leads to the lower and ST2 to the upper half of the keyboard.

If you have ordered the MKE without keyboard and need some information about the type of contacts and diode matrix please look at our web site. The schematics for keyboards with 2, 3, 4 and 5 octaves are available as pictures from the MKE information page:

www.doepfer.com → PRODUCTS → MKE → connecting keyboards (link).

(5, 6, 7, 8) Connectors for pitch bend, modulation, volumen and sustain / after touch

These connections are available as pin headers with three or four terminals. Version 1 of MKE is equipped with three pin headers with three pins (ST3, ST4, ST5) and one pin header with four pins (ST6). Version 2 of MKE is equipped with four pin headers with three pins (ST3, ST4, ST5, ST6).

The three-pin connectors (ST3, ST4, ST5, and ST6 for version 2) have these pins available:

- left (pin# 1) GND (= potentiometer ccw terminal)
- middle (pin# 2) measured voltage (= potentiometer wiper terminal)
- right (pin# 3) +5V (= potentiometer cw terminal)

Standard three-pin female connectors with crimped wires can be used to establish a detachable connection (available even as spare parts from Doepfer). As the

potentiometers work as voltage dividers a wide range of resistance values for the potentiometers can be used (~ 5k ... 100k, linear recommended).

The potentiometers connected to ST3, ST4, ST4 and ST6 (*only for version 2*) generate these Midi messages:

ST3	generates	pitch bend (with a small "plateau" around controller data 64)
ST4	generates	modulation (control change #1)
ST5	generates	volumen (control change #7)
ST6	<i>generates</i>	<i>after touch or any control change (only version 2)</i>

For ST3 and ST4 the voltage range ~ 0 ... 1.6 Volt corresponds to the Midi data range 0 ... 127. The reason for this limited voltage range is the rotating angle of the wheels we offer as spare parts. An output voltage range of ~ 0...1.6V was measured for these wheels if they are connected to GND and +5V as they do not cover the complete rotating angle because of the end stoppers.

For ST5 and ST6 (*only version 2*) the full voltage range 0 ... 5 Volt corresponds to the Midi data range 0 ... 127 as normally standard rotary or fader potentiometers are used for volume control.

In version 1 of MKE ST6 is a pin header with 4 pins (compatible to the 4 pin after touch connectors of the Fatar keyboards):

- left (pin# 1) measured voltage (after touch connection)
- (pin# 2) +5V
- (pin# 3) measured voltage (after touch connection)
- right (pin# 4) +5V

The pins 1-3 and 2-4 are shortened. The pins 1+3 correspond to the potentiometer wiper terminals of ST3/4/5 and are connected to GND on the MKE board with a 10k pull down resistor. The Fatar after touch sensors function as variable resistors. The resistance decreases if pressure applied to the sensor. The sensors forms a voltage divider with the 10k pull down resistor. Consequently the measured voltage is ~ 0V if no pressure is applied and increases as more pressure applied to the sensor. For some keyboards the 10k pull down resistor (R12) has to be changed for the best result (down to 100 Ohm for some types). The easiest solution is to solder a second resistor in parallel to R12 until the best result is obtained by trial and error. The after touch sensors of the Fatar keyboards are not very sensitive and it might be a problem to dose the Midi after touch as desired. But this is not a problem of the MKE but of the after touch sensors.

Instead of this a sustain pedal (resp. a jack socket to connect the sustain pedal) can be connected between pin 1 and 2 of ST6: as long as the sustain contact is open the measured voltage is 0V (→ Midi data = 0) because the pull down resistor R12 is effective. As soon as the contact closes the voltage jumps to +5V (→ Midi data 127). For this type of connection a sustain pedal with contact open at rest has to be used.

If a sustain pedal with contacts closed at rest is used (e.g. VFP1 or VFP2) ST6 resp. the jack socket has to be wired in a different way and a small modification of the MKE circuit is necessary: the 10k pull down resistor R12 has to be removed (above ST4/ST5). Instead of this the 10 resistor is connected between pin 1 and 2 of ST6 (on the pcb bottom side, not at the pins of ST6). Now it is turned into a *pull up resistor* that pulls the measured voltage to +5V (→ Midi data 127). The sustain contact resp. the jack socket is connected between GND and pin 1 of ST6. GND is e.g. available at one pin of ST3/4/5. Now the measured voltage becomes 0V (→ Midi data = 0) as the sustain pedal contact is closed at rest. As soon as the sustain pedal is operated the pull up resistor becomes effective and Midi data 127 is generated.

Another possibility is to connect a second normal potentiometer to ST6. In this case R12 has to be removed. The ccw terminal of the additional potentiometer is connected to GND (available at one pin of ST3/4/5), the wiper terminal is connected to pin 1 of ST6 and the cw terminal to pin 2 of ST6 (= +5V). This potentiometer can be used to generate any Midi controller or Midi after touch data.

Even for ST6 the full voltage range 0 ... 5 Volt corresponds to the Midi data range 0 ... 127.

Important! *Unused inputs of ST3/ST4/ST5 have to be jumpered to GND or +5V. Senseless MIDI data will be sent if one of the middle pins of ST3/ST4/ST5 is left open. For this the MKE is delivered with jumpers put on the connectors ST3/ST4/ST5. Remove these jumpers only if the pin header in question is used to connect a wheel, potentiometer or after touch sensor as described above. For ST6 this is not necessary because of the pull down resistor R12.*

Version 2 of MKE is equipped with two additional pin headers (ST7, ST8) and the connector ST6 is a three-pin type (please refer to the remarks above):

(9) Jumper for pull up/down resistor ST8


If a jumper is connected to this pin header the corresponding input is connected to GND (lower position, marked with the GND symbol) or +5V (upper position, marked with "+") via a 10k resistor. This is required if only a variable resistor or a switch has to be connected to ST6 (i.e. not a potentiometer with three terminals that works as a voltage divider). This applies e.g. for after-touch sensors, (foot) switches or foot controller that have only a two-pin variable resistor available. There are two possibilities to connect the element in question (switch or after-touch sensor or variable resistor):

- The element is connected to the pin header ST6 between the center pin and GND. In this case a pull-up resistor to +5V is required, i.e. a jumper has to be put on ST8 in the upper position (+). If the resistance of the element connected to ST6 decreases even the Midi data value decreases and vice versa.
- The element is connected to the pin header ST6 between the center pin and +5V. In this case a pull-down resistor to GND is required, i.e. a jumper has to be put on ST8 in the lower position (GND symbol). If the resistance of the element connected to ST6 decreases the Midi data value increases and vice versa.

(10) sound card connector

This pin header is planned to connect a suitable sound card (e.g. a sound card of the company Dream). The four pins have these functions (from left to right): +9V, NC, Midi Out, GND (NC = not connected). The terminal NC can be connected to +5V if required.

Controls (pcb top side)

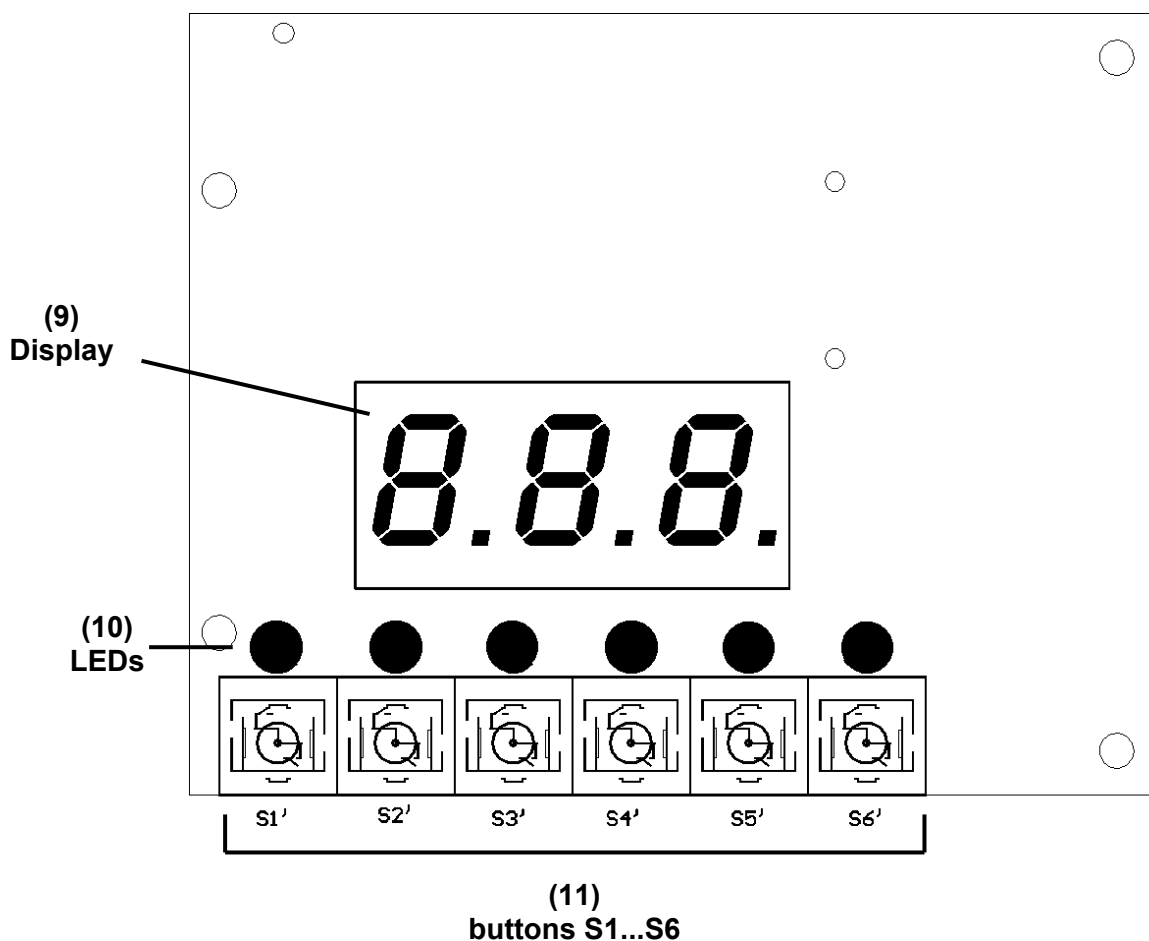

Display (9)

The display is used to show the value of the currently selected parameter, i.e. Midi channel, transpose, control change number of ST6 or program change number.

LEDs (10)

The LEDs indicate the currently selected menu. If the LEDs have to be arranged in a different way they can be de-soldered and connected via cables. Please refer to the warranty remarks on page 5.

Buttons (11)

The buttons are used to select one of the four menus (button 1...4) resp. to decrease or increase the value of the currently selected menu (buttons 5 and 6).

If other buttons are used they have to be connected in parallel to the buttons of the MKE. Please refer to the warranty remarks on page 5.

The six buttons are assigned to these functions (from left to right):

1. Midi channel

In this menu the desired Midi channel 1...16 is selected in combination with the up/down buttons. To avoid Midi note hang ups the channel can be changed only if no key is pressed on the keyboard (otherwise the note off message would be sent on a different Midi channel causing a never ending tone). The Midi channel is valid for all messages generated by MKE (i.e. note on/off, program change, control change, pitch bend, after touch).

2. Transpose

In this menu the Midi note number assigned to the lowest key on the keyboard is adjusted in octave intervals. The value (0,12,24,36,48 and 60) is displayed and can be changed with the up/down buttons. The lowest note key is always a "C". Only the octave of the "C" can be changed. Please refer to the remarks corresponding to different keyboard types on page 9 . For Fatar keyboards with 2 or 4 octaves 12 has to be added to obtain the lowest Midi note of the keyboard as the first octave of the internal contact matrix is not used for these keyboards. To avoid Midi note hang ups the transposition can be changed only if no key is pressed on the keyboard (otherwise the note off message would be sent in a different transposition causing a never ending tone).

3. Program Change

This menu is used to transmit Midi program change messages. The present program change number is displayed and can be changed with the up/down buttons. If this menu is called up for the first time after power on the displayed program change number is sent out via Midi – even without operating the up/down buttons. The reason for this feature is that the displayed program change number should correspond to the active program change number of the Midi device controlled by the MKE.

4. Function of ST6

This menu is used to assign the Midi function of the 4 pin connector ST6. Any control change number (0...127) and after touch can be assigned. In case of control change the number is displayed and can be adjusted with the up/down buttons. If control change number 128 is selected (i.e. if the display shows "127" and the up button is operated) after touch is assigned to ST6. In this case the display shows the characters " At" instead of a control change number. The factory setting is 64 (sustain).

5. Up / 6. Down

These are no menus but work as increment/decrement buttons for the currently selected parameter. In addition each menu button can be used to increment the parameter of the menu in question. E.g. if the program change menu is selected the program change menu button can be used to increase the program change number too and has the same function as the normal up button.

Parameter Storage

Whenever one changes from one menu to another the parameter of the preceding menu is stored non-volatile in the MKE memory. After the next power on these values are chosen. These values are stored: Midi channel, transpose, program change number, function of ST6, dynamic/non-dynamic operation.

Non-dynamic Operation

MKE was developed to be combined with velocity-sensitive keyboards manufactured by Fatar. For certain applications (e.g. organ keyboards, bass pedals) it might be desirable to turn off the Midi velocity and replace the variable velocity value in the note on message by a fixed value.


To select the non-dynamic mode one has to operate one of the control buttons during power on. Then the display shows "CoF" (abbreviation of "configuration") instead of the software version number and the 6 LEDs work inverted, i.e. all LEDs light up except the LED of the currently selected menu. The most left button (Midi channel menu in normal operation) is used to adjust the fixed velocity value in the range 1...127 in combination with the up/down buttons. If this parameter is set to 0 (zero) the dynamic mode is active again. The remaining 3 menu buttons have no function. If the desired velocity value is adjusted the MKE is turned off. After about 5-10 seconds it is powered again without operating one of the buttons. Now the normal operation mode is called up (the display shows the software version) with the new velocity value adjusted in the configuration mode.

Check list

In case that your MKE does not work at the first go please check the following points:

- Is the **power supply** working correctly ? After power on the display has to show the software version (e.g. "1.10") and all LEDs have to be off ! Otherwise the AC adapter used is not suitable, has the wrong polarity or does not work. The correct polarity is: outside ring = GND, inside lead = +7...12V.
- Are the Midi connections between MKE and the other Midi devices installed correctly ? Midi Out of the MKE has to be connected to Midi In of the device controlled by MKE. Especially when computers are used Midi In and Out are very often mixed up by the user.
- Please use only cables that are suitable for Midi.
- If all that is correct but playing on the keyboard seems not to generate Midi note messages check if the keyboard is connected in the right way as described on page 9 and if the Midi channel of the MKE corresponds to the Midi channel of the receiver.
- If you use another keyboard than the Fatar types (e.g. if you have built your own keyboard or contact matrix) double check if your contact matrix and the connectors is identically to the Fatar keyboards. The schematics for the Fatar keyboards with 2, 3, 4 and 5 octaves are available as pictures from the MKE information page: www.doepfer.com → PRODUCTS → MKE → connecting keyboards (link)
- If wheels, potentiometer, sustain pedal or after touch sensor are used check if they are connected in the right way to the MKE. Unused inputs (ST3/ST4/ST5) have to be terminated with jumpers if not in use as described in the manual.
- If one of the wheels or the potentiometer work inverted it is connected in the wrong way (GND and +5V mixed up).
- If the MKE generates no velocity check if a fixed velocity value has been set.

Appendix: Connecting the After Touch of Fatar keyboards:

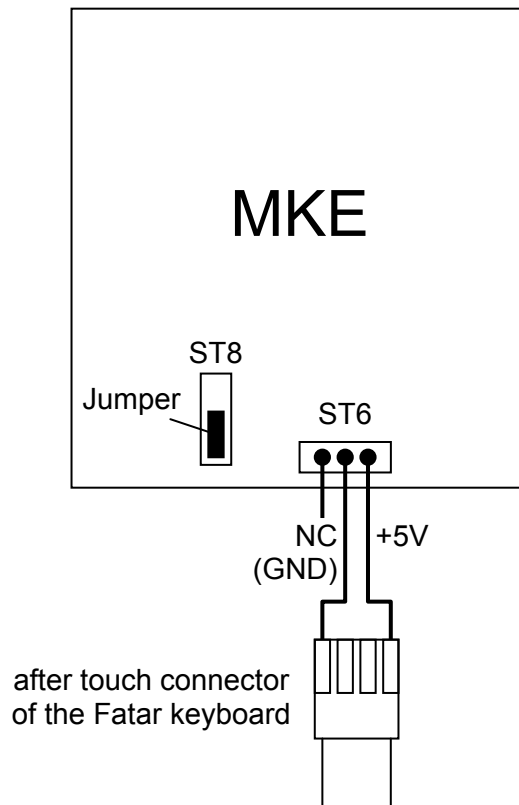

The value of the pull-down resistor R12 (10k) can be reduced to obtain a different behaviour of the after touch sensor.

DOEPFER
MUSIK ELEKTRONIK
www.doepfer.com